

HY280 display setting 设置HY280仪表：

1. Press OK to enter the password 9999 按OK键，输入密码9999




Select FUNC 选择FUNC 1 : Set up the receive matching mode 设置接收匹配模式



Press OK to enter for setting 点[OK]键进入设置，



Select END 选择EDN 1: The supporting dynamometer mode 配套测力计模式  
Press OK for confirmation 点[OK]确认; Back to FUNC state 返回到FUNC 状态,  
Select FUNC 4 选择FUNC 4

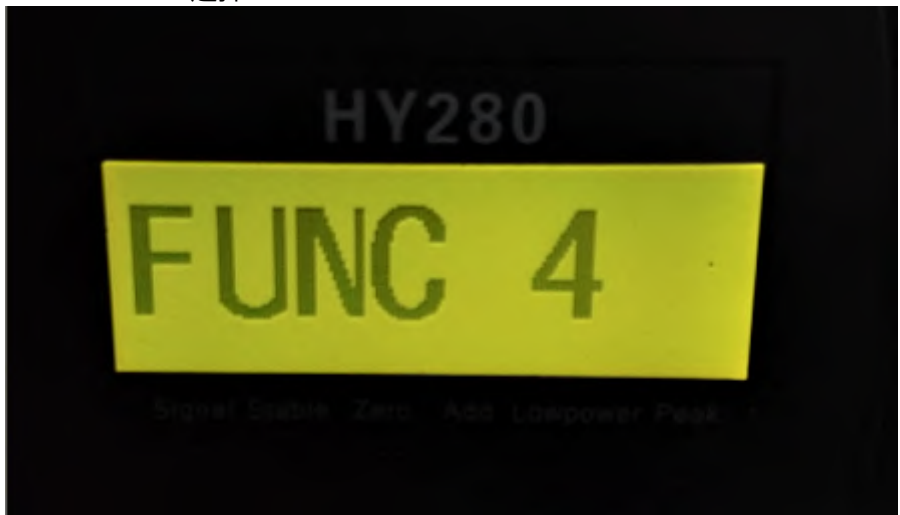

Press OK to enter 点[OK]进入,



Set the wireless frequency, for example 003# 设置无线频率，例如：003#  
Click OK to confirm, return to FUNC status, and then click C key to exit 点OK键确认，返回到FUNC 状态，再点C键退出。

Dynamometer setting 测力计设置：

Often press [FUNC] key to enter function setting, set [P3 01] : baud rate 9600 常按 [FUNC]键，进入功能设置，设置[P3 01]：波特率9600



Resetting [P5 04] : to match the way of the dynamometer 再设置[P5 04]:匹配测力计的通讯方式




Resetting [P13 03] : frequency, in line with HY280, for example: 03# 再设置[P13 03]: 频率, 与HY280一致, 例如: 03#



Press [\*] button to exit the frequency setting function and then press the [FUNC] key to return to the weighing state. 按[\*]号键，退出频率设置功能，再按[FUNC]键返回到称重状态。

At this moment the HY280 meter and the dynamometer should be able to display the data synchronously. 此时HY280仪表和测力计应该数据能同步显示了。

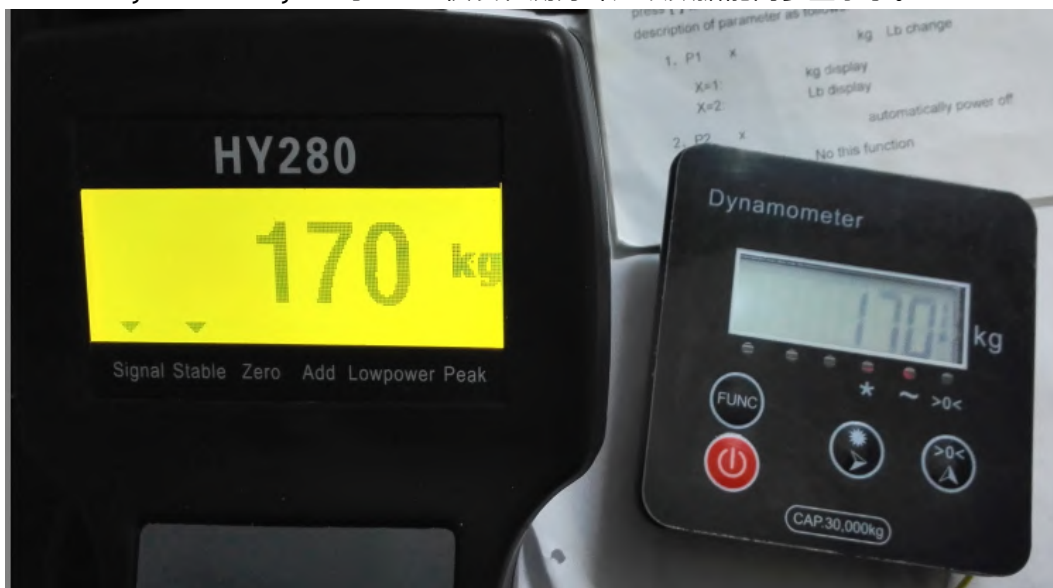

Note: the frequency of both must be set the same, as shown below: 注意：两者的频率必须设置相同，见下图：

